



## UXC Quick Install Guide

[www.uberwi.com/support](http://www.uberwi.com/support)


To watch a video of the install procedure please visit  
<https://youtu.be/tTg5eOUuSIw>

### Network and Power Connections

---

The UXC has 3 Ethernet ports. The WAN port should be connected to the Internet connection, and the LAN port should connect to your internal network. The WAN cable should be plugged in to the Internet connection source **before powering on the device**.

It is recommended that the UXC be plugged into a UPS to minimize power fluctuations.

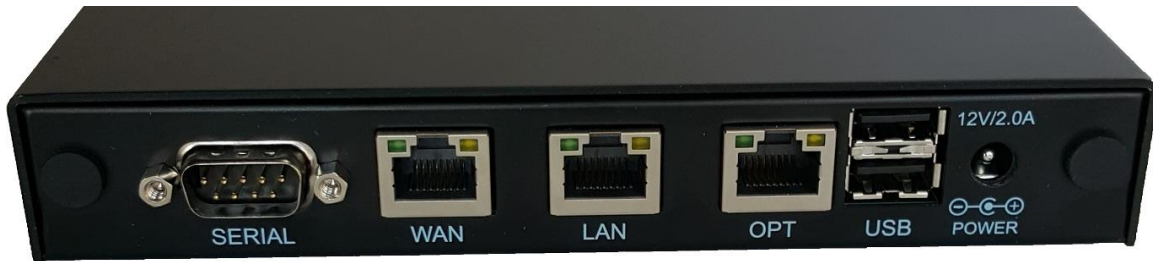

### UXC DHCP Settings

---

The UXC is configured to obtain an IP address from DHCP on its WAN Port.

The UXC also acts as a DHCP server for your Network. The IP range on the LAN port is 10.4.0.0 – 10.4.3.255 yielding 1024 usable IP addresses.

The inside LAN interface is addressed 10.4.0.1

The first 99 IP address are not in the UXC DHCP scope. 10.4.0.2 – 10.4.0.100 are intended to be used on network devices such as access points. Any IP in this range can be assigned and monitored. Alerts can be sent if the IP stops responding.